

BOARDS SUPPORTED

- Setting the scoreboard type also sets the default group number — indicated by an asterisk (*).
- When assigning a group number, select from the same scoreboard type.
- Each group number has its own default channel.

*Note: MP-70 with 69 data protocol will only run older scoreboards built approximately in 1984-1999.
The board type is listed on a label near the driver circuit boards inside the scoreboard. Custom scoreboard models are not included in this list.*

Board Type	Scoreboard*				G3 Wireless Group [Channel]				
	MP-50 Compatible		MP-70 Compatible		Default	Option	Option	Option	Option
00	BB-1500, BB-1600, BB-1700, BB-1800, BB-1851,	HK-1600, HK-1700, HK-1800, PS-1400, PSO-6900	BB-1500, BB-1600, BB-1700, BB-1800, BB-1851, BB-1900, BB-3600,	HK-1600, HK-1700, HK-1800, PS-1400, PSO-6900	9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
01	-	-	BB-1520, BB-1620, BB-1640, BB-1660, BB-1702,	BB-1850, BB-3620, BB-3660, BB-4660, MP-1400	9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
02	-	-	BB-1610, BB-1670, BB-1680, BB-3670,	WR-1400, WR-1599	9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
03	-	-	BB-1630, BB-1730	-	9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
04	-	-	BB-1720, BB-1722, BB-1760, BB-1770,	VB-1611	9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
05	-	-	BB-1635, BB-1735, BB-1855, BB-1860,	-	9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
06	-	-	BB-1625, BB-1645, BB-1665	-	9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-

Scoreboard*				G3 Wireless Group [Channel]				
Board Type	MP-50 Compatible	MP-70 Compatible		Default	Option	Option	Option	Option
07	-	BB-1615, BB-1675, BB-1685		9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
08	-	BB-1725, BB-1765, BB-1775		9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
09	-	BB-1636, BB-1736		9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
10	-	BB-1626, BB-1646, BB-1666, BB-1966, BB-2666		9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
11	-	BB-1616, BB-1676		9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
12	-	BB-1726, BB-1766, BB-1776, BB-3766		9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
13	-	HK-1650, HK-1655, HK-1750,	HK-1755, HK-1670	25* [3], 26 [4]	27 [5], 28 [6]	-	-	-
14	-	HK-1660, HK-1760, HK-1770, HK-1780,	HK-1870, HK-1880, HK-1885, MP-1651-4	25* [3], 26 [4]	27 [5], 28 [6]	-	-	-
15	-	MP-89088-2		1* [0]	2 [1]	3 [2]	4 [3]	5 [4], 6 [5], 7 [6], 8 [0]
16	-	-		-	-	-	-	-
17	-	-		9* [1], 10 [2]	11 [3], 12 [4]	13 [5], 14 [6], 15 [0], 16 [1]	-	-
18	-	-		-	-	-	-	-
19	-	-		-	-	-	-	-
20	-	HK-8216		25* [3], 26 [4]	27 [5], 28 [6]	-	-	-

Scoreboard*			G3 Wireless Group [Channel]				
Board Type	MP-50 Compatible	MP-70 Compatible	Default	Option	Option	Option	Option
21	-	SC-1728, SC-1768, SC-8124LA	37* [1]	38 [2]	39 [3]	40 [4]	-
22	-	SC-8124, SC-8424	37* [1]	38 [2]	39 [3]	40 [4]	-
23	CL-1031, FB-8120 series, FB-8127 series, FB-8132 series, FB-8218TK, SC-8120,	CL-1031, FB-8120 series, FB-8126, FB-8127 series, FB-8132 series, FB-8218TK, FB-8318 series, SC-8120	1* [0]	2 [1]	3 [2]	4 [3]	5 [4], 6 [5], 7 [6], 8 [0]
24	-	FB-8136 series, FB-8145 series	1* [0]	2 [1]	3 [2]	4 [3]	5 [4], 6 [5], 7 [6], 8 [0]
25	FB-8114, FB-8218	FB-8114, FB-8218	1* [0]	2 [1]	3 [2]	4 [3]	5 [4], 6 [5], 7 [6], 8 [0]
26	-	-	1* [0]	2 [1]	3 [2]	4 [3]	5 [4], 6 [5], 7 [6], 8 [0]
27	MP-7108	MP-7108, MP-8109, MP-8114, MP-8116, MP-8124	73* [6]	74 [5]	75 [4]	-	-
28	MP-7109, MP-7109T4, MP-7114	MP-7109, MP-7109T4, MP-7114, MP-7114PC	73* [6]	74 [5]	75 [4]	-	-
29	BA-7109CL	BA-1895, BA-7109CL	74* [5]	73 [6]	75 [4]	-	-
30	BA-7109T, MP-7114J,	BA-7109C, BA-7109T, BA-7109T-2 w/PC, MP-7114J	75* [4]	73 [6]	74 [5]	-	-
31	BA-7200, BA-7200AB, BA-7200T, BA-7209, BA-7216	BA-7116, BA-7200, BA-7209, BA-7200AB, BA-7209CL, BA-7200PC, MP-7200, BA-7200T,	29* [0]	30 [1]	31 [2]	32 [3]	-

Scoreboard*			G3 Wireless Group [Channel]				
Board Type	MP-50 Compatible	MP-70 Compatible	Default	Option	Option	Option	Option
32	BA-7100, BA-7107, BA-7109	BA-7100, BA-7107, BA-7109, BA-7109PC	29* [0]	30 [1]	31 [2]	32 [3]	-
33	-	BA-7118, BA-7118MP, BA-7118PC, TK-89048-2	29* [0]	30 [1]	31 [2]	32 [3]	-
34	-	BA-7126 series, BA-7127 series, BA-7128, BA-7136, BA-7220 series, BA-7420, MP-7126.	29* [0]	30 [1]	31 [2]	32 [3]	-
35	-	BA-7120, BA-7218	29* [0]	30 [1]	31 [2]	32 [3]	-
36	SC-8114	SC-8114	37* [1]	38 [2]	39 [3]	40 [4]	-
37	-	TK-8918 (ver. 1.23T or higher)	1 [0]				
38	-	BA-7136FB	29* [0]	30 [1]	31 [2]	32 [3]	-
39	-	BA-7100B, BA-7200MP, BA-7209MP	29* [0]	30 [1]	31 [2]	32 [3]	-
40	-	SC-8220-2	37* [1]	38 [2]	39 [3]	40 [4]	-
83	-	ST-1410-4, T-818-2, ST-1420-4, T-830-2	-	-	-	-	-
	PS	PS	29* [0]	-	-	-	-

Note: Scoreboard type 83 for Timers and Shot Timers can only be set via wireless method and does not set a default group number.

Note: Pitch Speed (PS, radar guns) are factory set to board type 83 and group 29; which cannot be changed in the field. If used with baseball scoreboards, then the scoreboard must not use group 29 to avoid possible wireless problems.